

Manual of musrSim

Kamil Sedlák¹, Toni Shiroka¹, Zaher Salman¹, Jose Rodriguez¹, Tom Lancaster², Thomas Prokscha¹,
Taofiq Paraíso¹, Robert Scheuermann¹, James S. Lord³

¹ *Laboratory for Muon Spin Spectroscopy, Paul Scherrer Institut, CH-5232 Villigen PSI, Switzerland*

² *Clarendon Laboratory, Department of Physics, Oxford University, Parks Road, Oxford OX1 3PU, UK*

³ *ISIS Facility, Rutherford Appleton Laboratory, Chilton, Oxon OX11 0QX, U.K.*

PSI, original manual August 2016; source-checked documentation revision August 2026

“musrSim” is a simulation program based on Geant4, optimised for the μ SR instruments. This document describes the user-macro interface implemented by the supplied source code for the μ SR instruments based on the GEANT4. The root output variables are also described.

1 Scope of the musrSim program

The program “musrSim” is a relatively general program that can be used to simulate the response of a μ SR [1] instruments (detectors) to muons and their decay particles (electrons, positrons and gammas), optionally including “optical photons”. Even though musrSim is tailored to the needs of the μ SR technique [6], it has been used also in the studies of beam-line elements like spin rotators, as well as in the detector development studies without any muons involved, e.g. to test the response of an APD-based scintillator counters to the irradiation of Sr radioactive source [9]. It should be straightforward to apply musrSim also to the low energy particle-physics experiments with muons.

The program is based on the Geant4 [2] and Root [3] libraries. Geant4 is Monte Carlo toolkit used (not only) in particle physics to simulate the passage of particles through detectors. Root is an analysis tool that allows one to manipulate and analyse the simulated data, namely to plot histograms and other graphical output.

The simulation of an instrument consists of two steps – simulation of the instrument response, which is done by “musrSim” program, and the subsequent analysis of the simulated output by either “musrSimAna” program (in case of μ SRinstruments) or by Root (if a special analysis is required, e.g. for non- μ SRapparatus). The reason for this split is purely practical – while it takes a lot of computer time to simulate large statistics data with musrSim, the subsequent analysis of the simulated data is relatively quick and allows the user to optimise and test different options of the analysis (e.g. different thresholds in positron counters, different logic in connecting veto and coincidence detectors, different rate of incoming muons, ...). The “musrSimAna” program is described in a separate manual.

The aim of the musrSim is to provide an easy-to-use simulation program, which does not require a deep knowledge of Geant4 in order to simulate a (μ SR) detector. In our view, the main advantages of musrSim are:

- Simple way how to define or modify the instrument geometry, including the sample environment, collimators and other parts.
- Limited (ideally no) need to modify and/or recompile the source code, because the parameters defining the instrument geometry, initial muon beam, electromagnetic fields, and other parameters are defined in a text file (the so called “macro file”).
- Implementation of the μ SR-specific classes (muon spin rotation in magnetic fields, muonium formation and decay, ...).
- Possibility to read in the output files of the TURTLE [5] program for the beam-line simulation.
- Simple way how to define (overlapping) electromagnetic fields.
- Output in the Root tree.
- Possibility to analyse the output with a general “musrSimAna” program.

- Possibility to use musrSim easily for calculating muon stopping profile (also in e.g. sample cells) or in developments of detector components (e.g. light propagation in the scintillator of a positron/muon counter and the subsequent light collection in a photomultiplier tube or APD).

On the other hand, there are also some drawbacks and limitations:

- The user has to have an installation of Geant4 and Root before installing musrSim.
- It is supposed the user will analyse the data with Root, therefore Root has to be installed.
- At present time the program does not simulate any muon-spin related physics processes happening in the sample, except for the muon spin rotation.
- The simulation of one event takes much more time than the measurement of a real event. The simulation time depends on the complexity of the instrument geometry and on the presence of electromagnetic fields. To simulate one million of muons in the case of the PSI high-field instrument took about 10 hours of a computer time of a desktop PC.

2 How to install and run musrSim

To install and run musrSim, one has to install Geant4 and Root first. The present version of musrSim has been tested with Geant version 11.2.0, and with Root version 6.30.02. While the version of Root should not be critical, the users of musrSim are encouraged to always use the latest version of Geant4 due to continuous improvements of this package. Up to date instructions are available on <https://gitea.psi.ch/LMU/musrsim>. A novice user of Geant4 may consider reading 30 pages of chapter 2 of the Geant4 User's Guide for Application Developers, called "Getting Started with Geant4 - Running a Simple Example".

Once Geant4 and musrSim have been successfully installed the simulation is started by executing:

```
> musrSim RUNNUMBER.mac
```

where *RUNNUMBER*.mac is a "macro file" containing the information about the instrument setup. The conventional macro name begins with an integer run number. The executable applies `atoi()` to the macro-file name when setting the Geant4 run-ID counter, so a leading integer is recommended.

In order to simulate a new instrument, the user has to define the following blocks of information in the macro file:

- Define the geometry (the so-called "volumes") of the new instrument. Note that in Geant4 volumes can be included inside other volumes (a "daughter" volume is positioned inside its "mother" volume), and it is therefore necessary to distinguish between the global (world) coordinates and the coordinates of the daughter volumes (local coordinates). It is not allowed to overlap the volumes (with the exception of the daughter and mother volume, in which case the daughter volume has to be fully contained within its mother volume).
- Define the electric and magnetic fields.
- Define physics processes relevant for your case.
- Define the initial muon parameters (more generally – initial particle parameters).
- Define some other parameters influencing the execution of the simulation.
- Define which variables should be written out to the output Root tree.
- In case it is required to visualise the geometry, define the visualisation attributes.

By default, the output of the simulation is written out in the subdirectory "data" with the name "musr_RUNNUMBER.root". The default "data" subdirectory can be changed (see Chapter 11). The simulated data are stored in a Root tree, which is some kind of a table with many variables for every simulated event, inside the musr_RUNNUMBER.root file.

3 How to stop musrSim

The execution of musrSim stops as soon as one of the following condition is fulfilled:

- Number of simulated events reaches the number of required events defined by command `/run/beamOn nrOfEvents` (see Chapter 11).
- Time for which the simulation is running exceeds the maximum allowed time defined by command `/musr/command maximumRunTimeAllowed timeMax` (see Chapter 11).
- Within a few seconds after a file “RUNNUMBER.stop” is created in the directory, in which the musrSim program was started. This allows the user to stop the simulation gently at any time.

If the musrSim program is killed in any other way, the output Root file does not close properly, and subsequently can not be analysed. The simulated data are lost.

4 Conventions

The default units of the musrSim in both the macro file (RUNNUMBER.mac) and in the Root tree are summarised in table 1.

Quantity	Default unit
Length	mm
Time	μ s (sometimes ns)
Energy	MeV
Momentum	MeV/c
Magnetic field	tesla
Electric field	kV/mm
Angle	degree

Table 1. The default units of musrSim.

5 Tips and tricks

- Visualise your instrument geometry during its construction.
- Check the output file for error messages, especially for volume overlaps.
- Note the the dimensions in volume definitions are often half-lengths, not the lengths (e.g. half-lengths of the box edges).
- The order of some commands in macro file matters – e.g. one has to define a mother volume before the daughter volume, etc.
- There are some special volume names, namely *World*, *Target* (same as *target*), *M0*, *M1*, *M2* and volumes starting with keywords *Shield* (same as *shield*), and volumes containing string *save*. All these volume influence the behaviour of the simulation, so understand how they act (see different chapters of this manual) before you use them.
- When implementing a new magnetic or electric field always check that fields at a few random space points correspond to the field you expect to observe (use command `/musr/command globalfield printFieldValueAtPoint`).

6 Detector construction

The user must first define the instrument geometry in the macro file. It should be relatively easy to understand how this is done from the example macro files distributed with musrSim program.

An important parameter to note in the following description of “/musr/command construct” command is the *idNumber* – an integer number uniquely identifying every volume. The ID volume numbers are

later on used also in the `musrSimAna` program, when some identification of a volume becomes necessary (i.e. volumes are described by *idNumber* rather than by their *name* command later on).

Another crucial parameter in “/musr/command construct” command is *sensitiveClass*, which defines whether the volume is sensitive (i.e. a signal can be detected in the volume) or not (i.e. the volume is just a dead material influencing the penetrating particles but not detecting them).

There are some special kind of volumes, which are defined by the name (or part of the name). The user can (but does not have) to use them. The first of them is the volume named “Target” (or “target”). It is expected, that this is the sample, and the quantities `muTargetTime`, `muTargetPolX`, `muTargetPolY`, `muTargetPolZ`, `muTargetMomX`, `muTargetMomY`, `muTargetMomZ`, will be saved when a muon enters this volumes for the first time in a given event.

The second special kind of volumes are the volumes named “M0”, “M1” and “M3” (or “m0”, “m1” and “m3”). Typically these volumes can be trigger detectors. The quantities `muM0Time`, `muM0PolX`, `muM0PolY`, `muM0PolZ` will be saved when a muon enters the volume called “M0” (or “m0”) for the first time (similarly for “M1” and “M2”). Note that it is not expected that `muM0Time` should be used in the analysis of the simulation – one should use the `det_time_start` quantity, which corresponds to the measured time in the experiment.

The third class of special volumes has names starting with the string “save”. Their purpose in the simulation is usually to check positions and momenta of particles at some position of the detector, even if the particle does not deposit any energy in the given “save” volume. Save volumes can therefore be made of vacuum. See section 12 for further details on what is saved in the Root tree.

The last special class of volumes has names starting with the string “kill”, “shield” or “Shield”. If a particle enters the “kill ...” volume, it is removed from further simulation. The same is true for the “shield ...” or “Shield ...” volumes for any particle apart for a muon. The motivation for this kind of volumes was to speed up the simulation by removing tracks that are unlikely to hit any detector. The “kill”, “shield” and “Shield” volumes should be used with care.

/musr/command construct *solid name dimensions ... material x y z motherVolume matrixName sensitiveClass idNumber*

This command defines a volume in GEANT4 (It comprises three steps of GEANT4: defines a solid, logical volume and physical volume. Details can be found in GEANT4 manual).

- *solid* (string) selects the solid constructor. The parser in the present source recognises the Geant4-like tokens “tubs”, “cons”, “box”, “trd”, “trd90y”, “sphere”, “para”, “torus”, “polyconeA” and “polyconeB”. It also contains specialised constructors “cylpart”, “uprofile”, “BarWithBevelledEdgesX”, “alcSupportPlate”, “TubeWithTubeHole”, “TubeWithHoleAndTubeHole”, “TubeWithHolePlusTubeHole”, “tubsbox”, “tubsbox2”, “boxbox”, “GPSforward”, “GPSbackward”, “GPSbackwardVeto”, “tubeWithWindows”, “GPDcollimator”, “tubsboxsegm”, “GPDsampleHolderA”, “GPDmHolder” and “cruciform”. The specialised shapes have parameter lists defined directly in `musrDetectorConstruction.cc`; users should copy a working example or check that source before using a specialised shape whose dimensions are not documented below.

A Geant4 polycone must be requested as either “polyconeA” or “polyconeB”; the plain token “polycone” is not accepted by the current parser. “polyconeA” corresponds to

`G4Polycone(solidName, phiStart, phiTotal, numZPlanes, zPlane[ ], rInner[ ], rOuter[ ])`

while “polyconeB” corresponds to

`G4Polycone(solidName, phiStart, phiTotal, numRZ, r[ ], z[ ])`.

The arrays `zPlane`, `rInner`, `rOuter`, `r` and `z` have to be defined previously with “/musr/command arrayDef”.

- *name* (string) stands for the name of the volume. As the command “/musr/command construct” constructs three kinds of Geant4 classes/volumes (the solid, logical volume and physical volume), there are three names of the concrete volume used internally inside `musrSim`: `sol_name`, `log_name` and `phys_name`. The main volume, inside which all other volumes are positioned, has to be called “World”.
- *dimensions* (floats) define the size of the required solid. They are kept equivalent to the dimensions of solids as used in GEANT4. For example the “box” is defined by its **halflengths** along *x*, *y* and *z* coordinates. Note that the number of *dimensions* varies for each type of solid. The units are mm for lengths and degrees for angles.

- *material* (string) one of the materials defined in GEANT4, namely in the file `$G4INSTALL/source/materials/src/G4NistMaterialBuilder.cc` (e.g. “G4_Galactic” for vacuum, “G4_Cu” for copper, “G4_AIR” for air, “G4_PLASTIC_SC_VINYLTOLUENE” for a scintillator, ...). One can also define a new material inside the function `musrDetectorConstruction::DefineMaterials()`. Presently “Mylar”, “Brass”, “Steel”, “Macor”, “MCPglass”, “MgO”, “SiO2”, “Al2O3”, “K2O” and “B2O3” are defined there.
- *x, y, z* (floats) – coordinates of the volume, used to position the volume within its mother volume (as used by the `G4PVPlacement`). Thus these coordinates are interpreted in the local coordinate system of the *motherVolume*.
- *motherVolume* (string) – name of the mother volume, in which the given volume should be positioned. Note that the mother volume has to be defined first (before its daughter), and that the name of mother starts with a string `log_mothername`, following the naming convention defined above. When the “World” volume is defined, its *motherVolume* should be set to “no_logical_volume”.
- *matrixName* (string) – name of the rotation matrix that will be used to position the volume inside its mother volume (as used by the `G4PVPlacement`). Use string “norot” if no rotation is required for the given volume. Otherwise the rotation matrix has to be defined by the command line “/musr/command rotation” **before** the given volume is defined.
- *sensitiveClass* (string) – specifies whether the volume is sensitive detector or just a piece of a “dead” material. Use the string “dead” for the latter, and the string “musr/ScintSD” for a scintillator (a sensitive volume, i.e. a volume where hits are observed). No other detector type (other than “dead” and “musr/ScintSD”) is supported at the moment, but the program might be extended in the future (e.g. to properly include also the semiconductor tracking detectors, etc.).
- *idNumber* (int) – serves as a unique identifier of the volume. It is primarily used in the output Root tree to identify the volume: 1) in which a muon stopped (tree variable “muDecayDetID”), 2) in which hits were deposited in case of sensitive volume (the variable “det_ID[det.n]”).

/musr/command rotation *matrixName* α β γ

/musr/command rotation *matrixName vx vy vz angle*

These commands define a rotation matrix of the name *matrixName* that can be used during the definition of the detector geometry (see the command “/musr/command construct”). It can be defined either by the Euler angles (if there are three float parameters behind the *matrixName*) or by the vector (*vx,vy,vz*) and an *angle* of rotation around this vector (if the fourth float parameter behind the *matrixName* is non-zero). All angles are specified in degrees.

/musr/command arrayDef *arrayName N x₁ x₂ ... x_N*

Defines an array with an assigned name *arrayName*, which has *N* elements.

/musr/command region define *regionName logicalVolume*

The “G4Region” can be created using this command, and a logical volume of the name *logicalVolume* will be assigned to it. If the G4Region of the name *regionName* does not exist (i.e. the command “/musr/command region define” is called for the first time for this particular *regionName*), the G4Region will be created first, otherwise the logical volume *logicalVolume* will be just assigned to the already existing G4Region.

G4Region can be useful namely for setting some special Geant4 parameters (production cuts) just in some part of the detector (e.g. where a finer simulation is needed). See Geant4 manual for more details.

/musr/command region setProductionCut *regionName gammaCut electronCut positronCut*

Set the so-called “production cuts” in the G4Region called *regionName*. The variables *gammaCut*, *electronCut* and *positronCut* are given in mm.

7 Electric and magnetic fields

/musr/command globalfield *fieldName half_x half_y half_z uniform X Y Z logicalVolume Bx By Bz Ex Ey Ez*

or

`/musr/command globalfield fieldName X Y Z fromfile fieldTableType fieldInputFileName logicalVolume fieldValue [fieldValueFinal] [fieldNrOfSteps]`

This command specifies the electric and/or magnetic fields, which are (in some sense) independent of any logical volume and can overlap with each other. In the case of tabulated field read in from an external field map file, the field values used internally by the Geant4 are linearly interpolated using eight (3D) or four (2D) grid points surrounding the point of interest.

- *fieldName* (string) – name of the field (important mainly for the user and print-out messages of the musrSim).
- *half_x*, *half_y*, *half_z* (floats) – the (half) dimensions of the box, within which the uniform field is defined. Used only for the uniform fields.
- **uniform** / **fromfile** – specifies whether the field is uniform within some volume or whether it is read in from an external file as a field-map.
- *X*, *Y*, *Z* (floats) – position of the centre of the field in the **global** coordinate system. IMPORTANT: For some technical internal Geant4 reasons, this **POSITION HAS TO LAY WITHIN THE *logicalVolume*!** Note that the logical volume may be positioned somewhere deep in a volume structure, not directly within the “World” volume, and therefore the (local) coordinates in the definition of the logical volume do not have to match the (global) coordinates *X*, *Y* and *Z*.
- *logicalVolume* (string) – specifies the logical volume, to which the field is “assigned”. One may ask, why a logical volume is needed for a field “independent” of any Geant4 volume? The reason is purely technical - the logical volume is used to allow the field to be rotated the same way as the assigned logical volume. The field can be smaller or larger than the logical volume, to which it is assigned. The field extending out of the logical volume will also be used in the Geant4 calculations (will be not truncated). The only limitation is that the centre of the volume has to lay within the assigned logical volume (see above). Sometimes it might be useful to create a very small volume (e.g. of the order of 0.01 mm) to position a rotated field into a (differently rotated or unrotated) larger volume. The volume can also be made of vacuum (i.e. G4.Galactic).
- *Bx*, *By*, *Bz*, *Ex*, *Ey*, *Ez* (float) – the vector of the uniform electromagnetic field. The units are tesla, for the first three components, and kilovolt/mm for the last three components. Used only for the uniform fields.
- *fieldTableType* (string) – specifies the format in which the field map is written in the file. In general, the field is specified in a grid of three space coordinates *x*, *y* and *z* (3D). Sometimes it is convenient to use the symmetry of the field and to reduce the field description to *R* and *z* (2D) only. In the following, we use the following terms:

nx, *ny*, *nz* – the number of divisions of the grid in *x*, *y*, *z*.

nR, *nz* – the number of divisions of the grid in *R*, *z*.

length unit – the unit in which the grid coordinates are specified, usually cm or m.

field normalisation factor – a multiplicative factor applied to the values of the field map to normalise the field (usually to 1 tesla or to 1 kV/mm in the centre of the field map).

minimumx, *maximumx*, *minimumy*, *maximumy*, *minimumz*, *maximumz* – the minimum and maximum value in *x*, *y* and *z* coordinates. These values can be usually easily calculated from the field map itself, however the field can also be specified in a compact format in which case the *x*, *y* and *z* coordinates are removed from the field map file, and the maxima and minima of coordinates have to be specified.

The following formats are supported:

3DB, **3DE** – magnetic or electric field specified in *x*, *y* and *z* coordinate system. The first line of the file has to contain the information about *nx*, *ny*, *nz*, *length unit* and *field normalisation factor*. Optionally, a compact form of the field map can be specified, in which case *minimumx*, *maximumx*, *minimumy*, *maximumy*, *minimumz*, *maximumz* has to be added to the first line of the file. The next few lines of the field map file beginning with the character “%” are comments. The following lines specify the *x*, *y*, *z*, *Field_x*, *Field_y*, *Field_z* values (non-compact format) or *Field_x*, *Field_y*, *Field_z* values (compact format).

3DBOpera, **3DEOpera** – 3D magnetic field in the form of OPERA output. It is expected that the *length unit* is 1 m, and the *field normalisation factor* is 1. (Note that this default normalisation is different from 2DBOpera and 2DBOperaXY options). However, a different *field*

normalisation factor can be specified in the field map file using the keyword “fieldNormalisation number” before the line started with 0.

It is expected that the first loop goes over the z coordinate of the field map, then (after z changed from minimum to maximum) it is looped over the y coordinate, and the highest-level loop goes over x coordinate. However, if the order of looping is reversed in the field map, it can be specified using the keyword “variableIncreasingOrder xyz” placed in the field map before the line started with 0.

The *length unit* can be changed to 1 cm by specifying “[CENTIMETRE]” after the “0” character in the field map file.

It is expected that the field map is defined in the full volume of the field. Sometimes (due to the symmetry of the field), it is enough to define the field in just one octant of the Cartesian coordinate system (e.g. for positive x , y and z). In such cases, the user can specify this in the field map file using the keyword “symmetryType number”, where the *number* specifies how the field should be extrapolated to other octants. The “symmetryType 1” case can be used for a field between two electrodes (e.g. of a spin rotator), where the electrodes are parallel with the (y, z) plane (i.e. the main component of the field is along the x axis). In this case: if the field at point (x, y, z) is (F_x, F_y, F_z) , the field in different octants will look be:

$$\begin{aligned} (x, y, z) &\rightarrow (F_x, F_y, F_z); \\ (x, y, -z) &\rightarrow (F_x, F_y, -F_z); \\ (x, -y, z) &\rightarrow (F_x, -F_y, F_z); \\ (x, -y, -z) &\rightarrow (F_x, -F_y, -F_z); \\ (-x, y, z) &\rightarrow (-F_x, F_y, F_z); \\ (-x, y, -z) &\rightarrow (-F_x, F_y, -F_z); \\ (-x, -y, z) &\rightarrow (-F_x, -F_y, F_z); \\ (-x, -y, -z) &\rightarrow (-F_x, -F_y, -F_z). \end{aligned}$$

Similar case is the “symmetryType 2”, where the main field component is along the y axis. These two symmetry types are realised as electric and magnetic fields in a spin rotator oriented along the z axis.

Example of the beginning of the 3DBOpera-type field map file:

```
2 2 55
1 X
2 Y
3 Z
4 BX
5 BY
6 BZ
7 DUMMY
fieldNormalisation -22.5733634
symmetryType 2
0 [METRE]
-0.2 -0.2 -1.35 0. 0. 0. 0.
-0.2 -0.2 -1.30 0. -0.0002 0. 0.
-0.2 -0.2 -1.25 0. -0.0002 0. 0.
-0.2 -0.2 -1.20 0. -0.005 0. 0.
...
```

2DB, 2DE – magnetic or electric field specified in R and z coordinate system. The first line of the file has to contain the information about nR , nz , *length unit* and *field normalisation factor*. The compact form of the field map (see 3DB case) is not supported. The next few lines of the field map file beginning with the character “%” are comments. The following lines specify the R , z , $Field_R$ $Field_z$ values.

2DBOpera – 2D magnetic field in the form of OPERA output. It is expected that the *length unit* is 1 cm, and the *field normalisation factor* is 0.00001 (Note that this default normalisation is different from 3DBOpera option). See example of **3DBOpera** for the usage of keyword “fieldNormalisation number”. The data in the field map OPERA file are ordered as R , *dummy*, z , $Field_R$, $Field_z$, *dummy*

2DBOperaXY – same as 2DBOpera except that the data in the field map OPERA file are ordered as R , z , *dummy*, $Field_R$, $Field_z$, *dummy*

- *fieldInputFileName* (string) – Name of the field map file.
- *fieldValue* (float) – the value of the field at some reference point (usually in the centre of the field). It acts as a multiplicative factor. The units are tesla for the magnetic field and kV/mm for the electric field.
- *[fieldValueFinal]* and *[fieldNrOfSteps]* (floats) – these optional parameters allow the user to ramp up (down) the field during a single run. The *fieldValue* serves as the initial field value, the *[fieldValueFinal]* is the final value and *[fieldNrOfSteps]* specifies number of steps, in which the ramp up/down will happen.

/musr/command globalfield *fieldName X Y Z quadrupole halfLength fieldRadius fringeFactor logicalVolume gradientValue [gradientValueFinal] [gradientNrOfSteps]*

Set up the field of a quadrupole magnet including the Enge function approximation of the fringe fields. The unit of *gradientValue* is T/m. The description is similar to the uniform field and to the tabulated fields. See “musrDetectorConstruction.cc” and “BLeFunction.hh” for the details.

/musr/command globalfield setparameter *parameterName parameterValue*

Set up some accuracy parameters used internally by Geant4 when calculating the motion of charged particles in the magnetic field.

parameterName (string) – one of the following parameters: “SetDeltaIntersection” “SetDeltaOneStep”, “SetMinimumEpsilonStep”, “SetMaximumEpsilonStep”, “SetLargestAcceptableStep” and “SetMaxLoopCount”. The exact meaning of these parameters can be found in Geant4 manual.

/musr/command globalfield printparameters

Print out the accuracy parameters (see “/musr/command globalfield setparameter”).

/musr/command globalfield printFieldValueAtPoint *x y z*

Print out the field value at the point (x, y, z) (given in the global coordinate system).

/musr/command globalfield printFieldDerivativeAtPoint *x y z*

Print out the values of the derivative of the magnetic field at the point (x, y, z) (given in the global coordinate system).

8 Physics processes

/musr/command process addDiscreteProcess *particle process*

/musr/command process addProcess *particle process ordAtRestDoIt ordAlongStepDoIt ordPostStepDoIt*

Adds processes for particles.

particle (string) – name of the particle to which a process is applied.

process (string) – name of the process to be assigned.

ordAtRestDoIt, ordAlongStepDoIt, ordPostStepDoIt (int) – priority switches.

See the file musrPhysicsList.cc for the list of defined processes (e.g. G4eMultipleScattering, G4eIonisation, ...) and Geant4 manual for the detail description of the processes.

/musr/command process SetLossFluctuations_OFF *particle process*

Switches off the statistical fluctuations in the ionisation losses. Can be useful for some technical studies. Presently works only for *G4eIonisation* and for *G4MuIonisation*.

/musr/command process addModel *particle process model priority*

Adds a supported electromagnetic model to a process. In the present source the implemented combinations are G4WentzelVIModel or G4UrbanMscModel for G4MuMultipleScattering. The process has to exist before the model is added.

/musr/command process cutForGamma *cutInMm*

/musr/command process cutForElectron *cutInMm*

Set the Geant4 production cuts for gamma and for electrons/positrons, respectively. The numeric value is interpreted as millimetres. A corresponding cutForMuon implementation is present only as disabled/commented code and is not a supported macro command.

For the interaction of keV μ^+ with nanometer-thin carbon foils – as they are used in the low-energy μ^+ beam line and spectrometer (LEM) at PSI – two special processes have been defined:

/musr/command process addProcess mu+ musrMuFormation -1 -1 2

Mu formation: yield function as well as the parameters are taken from: M. Gonin, R. Kallenbach, P. Bochler: "Charge exchange of hydrogen atoms in carbon foils at 0.4 - 120 keV", Rev.Sci.Instrum. 65 (3), March 1994.

/musr/command process addProcess mu+ musrMuEnergyLossLandau -1 -1 1

/musr/command SetLandauMPV 0.01

/musr/command SetLandauSigma 0.2

This adds to any enabled G4 energy loss process a Landau distribution with most-probable-value *SetLandauMPV* (keV), and width *SetLandauSigma* (keV).

9 Initial (muon) beam parameters

In historical versions of musrSim it had been implicitly assumed that the (muon) beam was oriented along the z -axis. Many variables defined below are therefore related to this z -axis (e.g. beam tilt, vertex sigma, ...). However, later on we implemented a possibility to change the direction of the initial beam to a random vector by the command "/gun/direction". It now works like this: the primary particles are first generated using all parameters of /gun/* commands as if the beam went along the z -axis, and just in the last moment before Geant4 starts to track them, they are (optionally) rotated to the direction defined by the /gun/direction command. This way the smearing of the vertex as well as beam tilt/pitch are propagated through the rotation.

/gun/primaryparticle primaryParticleName

(default: /gun/primaryparticle mu+)

Set the primary particle type, if it is not positive muon. For example, the negative muons are specified by "/gun/primaryparticle mu-".

/gun/meanarrivalttime meanArrivalTime

(default: /gun/meanarrivalttime 33.33333 microsecond)

Set mean arrival time difference between two subsequent muons (at continuous beam). The output variable "timeToNextEvent" is subsequently randomly generated using the value of *meanArrivalTime* and filled into the Root tree.

/gun/starttime t0 unit

By default, muons are generated at time = 0. The time of generation of muons can be set randomly according to the Gaussian or uniform distribution using variables "/gun/starttime" and "/gun/starttimesigma". See the description of the "/gun/vertexsigma" to understand how the choice is done. This command appears useful for the simulation of the laser-induced muon beam at ISIS, however it might be confusing or misleading when used together with the /gun/meanarrivalttime command. It is therefore recommended not to use it unless necessary.

/gun/starttimesigma t0 unit

See the description of "/gun/starttime" command.

/gun/vertex x0 y0 z0 unit

(default: /gun/vertex 0 0 -100 mm)

Set mean values of the x , y and z coordinates of the generated particles (muons). The smearing around these mean values can be set by /gun/vertexsigma and restricted by /gun/vertexboundary and/or /gun/boxboundary (see below).

(Applicable also to TURTLE input).

/gun/vertexsigma xSigma ySigma zSigma unit

(default: /gun/vertexsigma 0 0 0 mm)

If $xSigma > 0$... set σ_x , i.e. the standard deviation (RMS), of the x coordinate of the generated particles (muons) to $\sigma_x = xSigma$. The x coordinate of the initial muon is then generated according to the Gaussian distribution with the mean value of $x0$ and the standard deviation of $xSigma$.

If $xSigma < 0$... the x coordinate of the initial muon is generated **uniformly** in the interval of $(x0 - xSigma, x0 + xSigma)$.

If $xSigma = 0$... no smearing on the x coordinate is applied.

Similar is true for $ySigma$ and $zSigma$.

(Ignored by the TURTLE input).

/gun/vertexboundary R_max z_min z_max unit

Set maximum allowed radius, and minimum and maximum z coordinate of the generated particles (muons). This command might be useful especially if the user wants to restrict the area, in which initial particles are created, e.g. to force the initial muons to be created inside the beam pipe.

If the particles (muons) are read in from an external TURTLE file, only the restriction on the maximum radius R_max is applied on the initial particles, while z_min and z_max are ignored.

/gun/vertexrelativer *relativeRMaxAllowed* unit

Set maximum allowed radius of the beam relative to $x0$ and $y0$, i.e. relative to the centre of the beam. This command might be useful when the beam centre is not created at $x0=y0=0$, but the user wishes to restrict the beam within a symmetric cone around $x0$ and $y0$.

(Ignored by the TURTLE input).

/gun/boxboundarycentre $xMaxSource0$ $yMaxSource0$ $zMaxSource0$ unit

See below “/gun/boxboundary”.

/gun/boxboundary $xMaxSource$ $yMaxSource$ $zMaxSource$ unit

Define a box, within which the generated particles (muons) are created. The variables $xMaxSource0$, $yMaxSource0$ and $zMaxSource0$ define the centre of the box, the variables $xMaxSource$, $yMaxSource$ and $zMaxSource$ define the halfwidth, halfheight and halflength of the box.

This command can be useful for the laser-induced muon beam at ISIS.

(Ignored by the TURTLE input).

/gun/kenenergy *kineticEnergy* unit

Set the mean kinetic energy of the initial particles (muons).

(Ignored by the TURTLE input).

/gun/momentum *momentum* unit

Set the mean momentum of the initial particles (muons).

(Ignored by the TURTLE input).

/gun/momentumsmeearing *momentumSigma* unit

Set σ , i.e. the standard deviation (RMS), of the momentum spread, which is applied randomly to each generated initial particle (muon). It is the magnitude of the momentum, which is smeared.

(Ignored by the TURTLE input. However, a similar command “/gun/turtleMomentumBite” can be used for the TURTLE input file.)

/gun/momentumboundary p_min p_max dummy unit

Set a boundary for the minimum and maximum momentum of the initial particles (muons). The third argument *dummy* is ignored.

(Presently ignored by the TURTLE input).

/gun/tilt $xangle0$ $yangle0$ dummy unit

The “beam tilt” is understood as a constant angle tilt that is applied to all initial particles (muons) regardless on their distance from the centre of the beam.

(Applicable also to TURTLE input).

/gun/tiltsigma $xangleSigma$ $yangleSigma$ $zangleSigma$ unit

Gaussian smearing of the tilt angle is used when $zangleSigma \geq 0$; generation of a $\cos \Theta$ angular distribution is selected when $zangleSigma < 0$. Although the Geant4 messenger guidance still labels the third component as a dummy value, the present implementation uses it as this mode selector.

Current implementation caveat: $zangleSigma$ is not initialised in the constructor. Explicitly issue this command in ParticleGun mode rather than relying on an implicit default.

(Presently ignored by the TURTLE input).

/gun/pitch *pitch unit*

The “beam pitch” is understood as a variable angle applied to the initial particles (muons), which is directly proportional to the distance from the beam axis. The particles closer to the beam axis become smaller pitch than particles further away from the beam axis. The angle given as *pitch* will be applied to a particle generated 1 mm away from the beam centre, i.e. the particle generated 7 mm away from the beam axis will be assigned the angle of $7 \cdot \textit{pitch}$. The pitch allows the user to focus or defocus the initial particle beam. Particles will be focused for positive pitch and defocused for the negative pitch.

(Applicable also to TURTLE input).

/gun/muonPolarizVector *xpolaris ypolaris zpolaris*

Set polarisation of the initial particle (muon) in a form of a vector $P = (xpolaris, ypolaris, zpolaris)$. The polarisation vector does not have to be normalised, the normalisation will be done internally by the program. However note that if the magnitude of P is set to less than 1e-8, the user can achieve an unpolarised muon beam. See the source code of musrPrimaryGeneratorAction.cc if you need to use unpolarised beam by this parameter, because there is some trick based on the magnitude of P. (Applicable also to TURTLE input).

/gun/muonPolarizFraction *polarisFraction*

Set the fraction of the muon polarisation. The variable *polarisFraction* has to be set in the range of -1 to 1.

If *polarisFraction* is set to 1, all muons are polarised in the direction of polarisation vector defined by “/gun/muonPolarizVector”.

If *polarisFraction* is set to 0, half of the muons are polarised in the direction of polarisation vector, the second half is polarised in the opposite direction, so in the end the muon beam should act as unpolarised.

If *polarisFraction* is set to -1, all muons are polarised in the direction opposite to the polarisation vector.

If *polarisFraction* is set to 0.9, then 95% of the muons is polarised in the direction of polarisation vector, and 5% of them is polarised in the opposite direction!.

This command is ignored if magnitude of polarisation vector defined by “/gun/muonPolarizVector” is smaller than 1e-8!

(Applicable also to TURTLE input).

/gun/direction *xDirection yDirection zDirection*

Set initial beam direction as a vector (without units). The vector does not have to be normalised to 1. Both beam direction and beam spot are rotated. See comments at the beginning of this chapter.

(Applicable also to TURTLE input).

/gun/decaytimelimits *muDecayTimeMin muDecayTimeMax muMeanLife unit*

(default: /gun/decaytimelimits -1 -1 2197.03 ns)

If *muDecayTimeMax* is less or equal to zero, this command is ignored, and the muon decay time is set internally by GEANT4. Otherwise the muon will be forced to decay within a time interval given by *muDecayTimeMin* and *muDecayTimeMax*, and the mean muon lifetime will be set to *muMeanLife*. In such case *muDecayTimeMin* has to be equal or larger than 0 and *muDecayTimeMax* has to be larger **or equal** to *muDecayTimeMin*.

(Applicable also to TURTLE input).

/gun/turtlefilename *turtleFileName*

Set the filename of the TURTLE input file. If this variable is set, TURTLE file will be used to initiate muons. Otherwise the muons would be generated randomly. If the end of the TURTLE file is reached (because the user requested to simulate more events than saved in the TURTLE file), the TURTLE file be be rewind to its beginning. Note that this does not mean that the same events will be simulated after the rewind, because the random seed will be set differently than at the beginning of the simulation. The muons initialised at the same position and with the same momentum will have completely different (random) multiple scattering, penetration depths, decay times, decay positron energies and angles, ..., and therefore will be (almost completely) different events not affecting the statistical quality of the simulation.

/gun/turtleZ0position *z0_InitialTurtle unit*

Set the z-position which has been used to generate the TURTLE file.

If this value differs from the $z0$ value of the “/gun/vertex” command, than the particle initial position is linearly extrapolated from $z0_InitialTurtle$ to the point corresponding to $z0$, using the direction of its momenta.

MORE DETAILS:

When running TURTLE (e.g. when generating the TURTLE file using the TURTLE program), the user has to specify the z position, at which the TURTLE particles (muons) would be exported. Sometimes this z position does not correspond to the point of origin of the musrSim geometry. In such case, the variable $z0_InitialTurtle$ should be set to the value, that in musrSim coordinate system corresponds to the point, at which the TURTLE file was exported. For example – if the TURTLE file was exported just after the last quadrupole of a beam-pipe, and in the simulation the edge of the last quadrupole corresponds to -100 cm, than the $z0_InitialTurtle$ should be also set to -100 cm.

/gun/turtleInterpretAxes *axesWithSign*

Normally it is expected that the coordinates in TURTLE are x , $xprime$, y and $yprime$. One can specify whether the x and y axes of the position in TURTLE should be interpreted differently. The following options are supported for *axesWithSign*: $x-y$, $-xy$, $-x-y$, yx , $y-x$, $-yx$, $-y-x$.

Example: the option $y-x$ means that first four coordinates in the TURTLE input file are interpreted as y , $yprime$, $-x$, $-xprime$.

/gun/turtleMomentumBite *turtleMomentumP0 turtleSmearingFactor dummy*

Modify the smearing of the momentum bite specified in the TURTLE input file. Normally the muon momentum is defined already in the TURTLE input file. This command allows the user to modify the momentum smearing (momentum bite) of the muon beam. The variable *turtleMomentumP0* will be taken as the mean momentum (in MeV/c), around which the momentum will be increased/decreased. It does not have to be the real mean value of the initial muon momentum distribution. The variable *turtleSmearingFactor* is the smearing factor in per cent, by which the momentum bite will be increased/decreased around the *turtleMomentumP0*. The following equation is used to change the muon momentum: $p_{new} = turtleMomentumP0 - (turtleMomentumP0 - p_{TURTLE}) \cdot 0.01 \cdot turtleSmearingFactor$. This means that:

turtleSmearingFactor = 100 ... the muon beam momentum will not be modified.

turtleSmearingFactor = 0 ... the muon beam momentum will be set to the constant value of *turtleMomentumP0*.

turtleSmearingFactor = 200 ... the muon beam will have two times broader distribution compared to the original TURTLE file.

/gun/turtleMomentumScalingFactor *scalingFactor*

Modify the turtle momentum by this scaling factor – e.g. if the user wants to shift the mean momentum from 28 MeV/c to 14 MeV/c, this scaling factor has to be set to 0.5. Note that also the momentum bite will be reduced by the same scaling factor. This scaling is done before the command “/gun/turtleMomentumBite” (if both are requested).

/gun/turtleFirstEventNr *lineNumberOfTurtleFile*

In the present implementation this value is the number of TURTLE lines skipped before the first event is read. Thus a value of 0 starts with the first line, and a value of N starts with the line after N skipped lines. The command name and messenger text describe this as a line number, so take care with the off-by-one convention. This option is needed when the user wants to reproduce the simulation of an event using the same random number generator and TURTLE initial particle as in some previous run, however he wants to skip some (uninteresting) events at the beginning of the simulation.

/gps/*

In most cases, musrSim uses the so called “G4ParticleGun” to generate the primary particles (muons). The commands for G4ParticleGun were summarised previously, they start with /gun/ keyword.

However, there is an alternative particle generator called “GPS (General Particle Source)”, which is useful when simulating the decays of radioactive atoms and for other purposes. Whenever any /gps/ keyword is present in the macro, musrSim selects G4GeneralParticleSource instead of constructing its G4ParticleGun. **Current implementation caveat:** the custom /gun/ messenger is still registered and several /gun/ handlers dereference the ParticleGun. Therefore do *not* mix /gps/* commands with a GPS macro; they are not reliably ignored by the present source. The GPS

commands themselves are Geant4 commands; consult the Geant4 General Particle Source documentation. Some useful commands are:

```
/gps/particle ion
/gps/ion 38 90 0 0
/gps/position 0 0 0
/gps/energy 0 keV
/gps/ang/maxtheta 2 deg
/gps/ang/maxphi 2 deg
```

10 Optical photons

Normally the simulation of “detected signal” stops at the level of the deposited energy in a sensitive volume (e.g. in a scintillator tile). However, in some special cases, one would like to know how the light is propagated through the scintillators. In such case simulation of optical photons is possible. Note that the optical photon in Geant are treated as a class of particles distinct from higher energy gamma particles – and there is no smooth transition between the two. Some additional material properties of an active detector and of the detector surface have to be defined for optical photons. We strongly recommend the users willing to simulate optical photons to read the chapter “Optical Photon Processes” in [4] to understand the rest of this chapter.

The simulation of optical photons will significantly (in some cases dramatically) reduce the speed of the program. The output of the optical photon simulation is stored in variables starting with the string “odet_”. The user has to specify several parameters in order to simulate optical photons:

/musr/command G4OpticalPhotons *true*

Specifies to musrSim whether optical photons should be simulated or not. If this parameter is set to *false*, anything connected with optical photons will be ignored internally in musrSim, and the user therefore does not have to comment out other parameters connected with optical photons in the macro file.

/musr/command G4OpticalPhotonsUnprocess *true*

Keeps optical photons enabled in Geant4 but suppresses musrSim’s optical-photon signal processing in **musrScintSD**. This specialised mode was introduced for workflows that first preselect reproducible events and only later perform the expensive optical-signal processing. It is meaningful only together with **G4OpticalPhotons *true***. The default is false.

/musr/command materialPropertiesTable *MPT_name property n E(1) ... E(n) val(1) ... val(n)*

Defines some optical *property* of a given material (e.g. absorption length, refractive index, scintillation yield, ...) to a material property table. *MPT_name* stands for the material property table name. The table has *n* different values *val(1) ... val(n)* for the same number of optical photon energies *E(1) ... E(n)* expressed in MeV. If *n=0*, the *property* is called “constant property”. Some of the possible *property* keywords are: ABSLENGTH, RINDEX, FASTCOMPONENT, SLOWCOMPONENT, SCINTILLATIONYIELD, and some of the constant *properties* are SCINTILLATIONYIELD, RESOLUTIONSCALE, FASTTIMECONSTANT, SLOWTIMECONSTANT, and YIELDRATIO. See other *property* keywords in chapter “Optical Photon Processes” in [4].

SCINTILLATIONYIELD ... no. of photons per 1 MeV of deposited energy.

RESOLUTIONSCALE ... intrinsic resolution – normally 1, larger than 1 for crystals with impurities, smaller than 1 when Fano factor plays a role.

YIELDRATIO ... relative strength of the fast component as a fraction of total scintillation yield.

/musr/command setMaterialPropertiesTable *MPT_name material_name*

Assigns a material property table defined by “/musr/command materialPropertiesTable” to a given material.

/musr/command opticalSurface *surface_name phys_volName1 phys_volName2 surface-Type surfaceFinish surfaceModel MPT_name*

Defines “border surface” (G4LogicalBorderSurface, see subsection “Boundary Process” of chapter “Optical Photon Processes” in [4]).

surface_name name of the newly defined surface.

phys_volName1, **phys_volName2** names of the physics volume in question (it is an ordered pair!).

surfaceType one of the following: dielectric_dielectric, dielectric_metal, dielectric_LUT, firsov, x_ray.

surfaceFinish surface finish properties, such as: polished, ground, etchedair, ...

surfaceModel one of the following: glisur, unified, LUT.

MPT_name optional “material properties table name” which should be assigned to the surface. E.g. REFLECTIVITY or EFFICIENCY for a given surface may be assigned this way.

/musr/command OPSA *subcommand parameters ...*

Different commands related to Optical Photon Signal Analysis (OPSA):

signalSeparationTime *timeSeparation*

If two subsequent optical photons arrive to the same active detector in time smaller than *timeSeparation*, they will form the same “optical photon signal”. Otherwise (i.e. if there is no photon detected for time larger than *timeSeparation*) the next arriving photon will start a new “optical photon signal”. See the similarity to the command “/musr/command signalSeparationTime *timeSeparation*” for the deposited energy signals.

OPSAhist *nBins min max*

Defines “OPSA” histograms – i.e. histograms that contain the time distribution of the arrival of optical photons.

nBins ... number of bins of the histogram

min ... minimum of the x-axis of the histogram

max... maximum of the x-axis the histogram

In fact three kinds of histograms are created – see command “/musr/command OPSA events-ForOPSAhistos *eventID detID*”.

eventsForOPSAhistos *eventID detID*

Defines event number and detector ID, for which histograms of the OPSA will be stored. If *detID* is set to zero, all detectors will be stored for the given event.

The naming convention for the histograms is the following: OPSAhist_*eventID_detID_n*, where *n* is the number of the “optical photon signal” in the event *eventID* in the detector *detID*. There are other two histograms, namely “OPSAshape_*eventID_detID_n*”, which shows the signal from OPSAhist convoluted with the response function of the optical detection device as e.g. G-APD, and “OPSA_CFD_*eventID_detID_n*”, which shows the signal from OPSAshape after the constant fraction discriminator.

There are two special cases:

eventID = -1 ... OPSA histograms for all events will be summed into a single histogram.

eventID = -2 ... OPSA histograms will be created for all events (all histograms saved individually).

pulseShapeArray *pulseShapeFileName*

pulseShapeFileName is the name of the file that contains response function (pulse shape) of a single cell (single photon) detected by the photosensitive detector. The data format is very strict:

% ... comments

first column ... time in picoseconds (it has to be: 0, 1, 2, ... iPSmax where iPSmax is smaller than 10000)

second column ... amplitude of the APD response function

Internally in musrSim, the data read from this file are interpolated to the centres of the bins of the histograms defined by “/musr/command OPSA OPSAhist ”.

CFD *a1* delay timeShiftOffset

Configures the constant-fraction-discriminator calculation. *a1* is the scale applied to the unshifted pulse, *delay* is the time shift used when constructing the CFD waveform, and *timeShiftOffset* is added to the reported crossing time. The numerical time values use the same time coordinate as the OPSA histogram (normally ns).

minNrOfDetectedPhotons *N*

Minimum number of detected photons required for an optical-photon signal to be processed by OPSA.

signalSeparationTime *time*

Time separation in ns above which detected photons are assigned to a new optical-photon signal.

photonFractions *fracA fracB thresholdC thresholdD*

Sets the fractions used for *odet_timeA*/*odet_timeB* and the absolute/normalised signal thresholds used for *odet_timeC*/*odet_timeD*.

APDcells *nx ny nz halfX halfY halfZ*

Enables finite APD-cell effects. The sensitive device is divided into *nx*×*ny*×*nz* cells within the supplied half-dimensions. The parser passes the dimensions directly to the APD-cell calculation; Geant4 internal length units are mm, so these numerical half-dimensions are interpreted as mm.

SetAPDcellsTimeVariationSigma *sigma*

Enables a Gaussian time variation for APD cells when *sigma* is non-zero. The parser interprets *sigma* in ns.

SetAPDcrossTalk *probability*

Enables APD cross-talk when the supplied probability is greater than zero.

Tips and tricks for optical photons

- One has to assign a non-zero EFFICIENCY and a REFLECTIVITY smaller than 1 to a boundary surface between the scintillator and sensitive device (e.g. an APD).
- To get a perfectly reflecting surface, one can use REFLECTIVITY=1; EFFICIENCY=0; *surfaceType*=dielectric_metal, *surfaceFinish*=polished, *surfaceModel*=unified.

11 Some other parameters**/run/beamOn *nrOfEvents***

Specify how many events will be simulated in this run/job.

nrOfEvents (int) – number of events to be simulated.

(This is a default Geant4 command, which has to be specified in any simulation run).

/musr/command rootOutputDirectoryName *dirName*

(default: /musr/command rootOutputDirectoryName data)

Specify the (sub)directory to which the output file will be written out.

/musr/command logicalVolumeToBeReweighted mu *logicalVolume weight*

(default: not defined; no reweighting is done unless explicitly requested by this command.)

Events can be reweighted by this command. If muon **stops and decays** in the volume *logicalVolume*, the event will be reweighted using the requested *weight*. Namely, only each n^{th} event will be stored in the output Root tree ($n = weight$) with the Root tree output variable “weight” set to *weight*, while other (non- n^{th}) events will be aborted. (The decision which event is to be stored and which to be aborted is done at random). This reweighting might be useful in the cases when the user wants to speed-up the simulation (respectively to reduce the number of fully simulated events), while keeping the high number of events interesting for the analysis. For example, one can set the reweighting of events in which muons stop in the collimator. The user should then use the *weight* stored in the Root tree when analysing the simulated data (i.e. when filling histograms). Compared to the simulation with no weighting applied, the histograms with weighted events will have larger errors, but the distributions should not differ more than within the statistical errors.

Note that the *weight* parameter is integer, and “mu” stands for “muons” (at the moment reweighting based on electrons or positrons is not supported).

/musr/command SetUserLimits *logicalVolume* *ustepMax* *utrakMax* *utimeMax* *uekinMin* *urangMin*

Set the so-called user limits (G4UserLimits) in a volume *logicalVolume*. The five last parameters correspond to the Geant4 methods “SetMaxAllowedStep”, “SetUserMaxTrackLength”, “SetUserMaxTime”, “SetUserMinEkin” and “SetUserMinRange”. **NOTE THAT G4StepLimiter AND/OR G4UserSpecialCuts HAS TO BE DEFINED FOR THE REQUIRED PARTICLE TYPES BEFORE CALLING THIS COMMAND!**

(E.g.: “/musr/command process addProcess mu+ G4StepLimiter -1 -1 5”)

See chapter “5.7. User Limits” (namely “5.7.2. Processes co-working with G4UserLimits”) of the Geant User Manual for more details about this issue.

The user can set G4UserLimits to logical volume and/or to a region. **At the moment, “/musr/command SetUserLimits” in musrSim supports the G4UserLimits in logical volumes only, not in the G4Regions.** User limits assigned to logical volume do not propagate to daughter volumes, while User limits assigned to region propagate to daughter volumes unless daughters belong to another region. If both logical volume and associated region have user limits, those of logical volume win.

/musr/command storeOnlyEventsWithHits false

By default, only the events in which at least one hit in an active volume (detector) has been recorded are saved to the output Root tree, because the events with no hit in any detector will anyway not contribute to the real measurement (even not to the pileup background). However, the user has a possibility to use this command to store all events for some technical study, e.g. to learn where the muons stop in collimators, etc.

/musr/command storeOnlyEventsWithHitInDetID *volumeID*

This command is similar to the previous one. Only the events, in which there was at least one hit in the volume with the *volumeID* will be saved into the output Root tree. This command might be useful in some technical studies, it might introduce some bias in a physics study.

/musr/command storeOnlyEventsWithMuonsDecayedInDetID *volumeID*

Store only events for which the muon decay/stopping detector ID equals *volumeID*. As with other event-selection commands, this changes the population written to the ROOT tree and can bias a physics analysis if it is used unintentionally.

/musr/command storeOnlyTheFirstTimeHit true

This command specifies that only the hit that happens first will be saved, while all the other hits will be ignored. This command might be useful in some technical studies, it would be harmful in most physics studies.

/musr/command killAllPositrons true

It might be useful in some technical studies to abandon all positron tracks (to ignore all positrons). For example if the user wants to study where the muon hit detectors and where do they stop and decay, this command might help him to get rid of all hits caused by the decay positron. This command would be harmful in most physics studies.

/musr/command killAllElectrons true

See “/musr/command killAllPositrons true” for the explanation.

/musr/command killAllGammas true

See “/musr/command killAllPositrons true” for the explanation.

/musr/command killAllNeutrinos false

By default the neutrino tracks are “killed” in the musrSim to speed up the simulation, because the neutrinos anyway do not interact with the detectors. (This “killing” of neutrinos does not affect the muon decay in any way). However, it might be useful not to kill the neutrinos when the user wants to display the complete muon decay event. This command allows one not to kill the neutrinos.

/musr/command getDetectorMass *logicalVolume*

This command prints out the mass of a given volume (detector) including all its daughter volumes (components).

/musr/command signalSeparationTime *timeSeparation*

There is some time for each detectors, during which it can not distinguish two subsequent hits. The command mimics such feature. If there are two energy deposits that happen in the same active volume (detector) within the time *timeSeparation* (in ns), then these two energy deposits are summed up into a single hit. Otherwise they will form two different hits. This is true regardless on whether the two energy deposits were induced by the same particle or by different particles. Presently the parameter *timeSeparation* is common to all scintillator detectors in the system, which means it is not possible to set different *timeSeparation* for a slow and fast scintillator detectors of the instrument.

/musr/command maximumNrOfStepsPerTrack *n*

Maximum number of steps allowed for a single track. If the number of steps per track exceeds *n*, the track is killed, and the simulation proceeds with the next track.

/musr/command maximumTimePerEvent *time*

Maximum time (in seconds) allowed for the simulation of a single event. If this time is exceeded, the event is killed and the simulation of the next event starts. The default value is 60 seconds. The variable *time* is integer!

/musr/command maximumRunTimeAllowed *timeMax*

If a musrSim job is run on a pc farm with a time limit on the job execution, and the job exceeds the time limit, the simulation will be killed. The output Root tree will be not closed properly, and the information stored in the Root vector “geantParametersD” will be not saved. To avoid the hard abort, the job will be terminated gently if its physical execution time exceeds *timeMax*. Note that the units of *timeMax* are seconds, and the default value is set to 85000s (23 hours, 37 minutes). (Note that the simulation can also be terminated gently by creating a file “RUNNUMBER.stop” in the working directory, where RUNNUMBER matches the run number specified in the name of the macro file.)

12 Output root tree variables

The value of -999 or -1000 indicates that the given variable could not be filled (was undefined in a given event). For example if the variable “muTargetTime” is set to -1000 it means that the initial muon missed the sample, and therefore no time can be assigned to the sample hit.

The user can control many (but not all) ROOT branches with

/musr/command rootOutput *configurationKey* off

Disables a branch or branch group that is enabled by default.

/musr/command rootOutput *configurationKey* on

Enables one of the branch groups that is disabled by default.

The configuration key is usually the ROOT branch name, but there are important exceptions. In particular, *det.start* controls ROOT branch *det.time.start* and *det.end* controls *det.time.end*. The key *fieldNomVal* controls both *nFieldNomVal* and *fieldNomVal*. The field-integral keys *fieldIntegralBx*, *fieldIntegralBy*, *fieldIntegralBz*, *fieldIntegralBz1*, *fieldIntegralBz2* and *fieldIntegralBz3* are disabled by default and are enabled with “on”. Likewise *odet.timeCFDarray*, *odet.timeC1* and *phot.time* are optional groups enabled with “on”. Special *save.** branches are created as a group when a save volume is present and are not controlled individually by this command. The ROOT branches *det.n* and, when optical output is active, *odet.n*, are also created directly rather than through an individual “off” key. Although *timeToNextEvent* has an internal store flag, the present macro parser has no *rootOutput timeToNextEvent off* entry.

The list of variables that can be stored in the ROOT tree:

runID (Int.t) – run ID number.

eventID (Int.t) – event ID number.

timeToNextEvent (Double.t) – time difference between two subsequent events (at continuous beam facility) (in μ s). This time difference is generated randomly using the “meanArrivalTime” defined in “/gun/meanarrivaltime meanArrivalTime”.

weight (Double.t) – event weight.

BFieldAtDecay – one ROOT branch containing six Double_t leaves named Bx, By, Bz, B3, B4 and B5. They are the six components of the electromagnetic field at the muon-decay position and time. The first three leaves are the magnetic field (tesla); the last three are the electric field (kV/mm).

muIniTime (Double_t) – time when the initial muon was generated (in μs).

muIniPosX, muIniPosY, muIniPosZ (Double_t) – initial position where muon was generated (in mm).

muIniMomX, muIniMomY, muIniMomZ (Double_t) – initial momentum of the muon when it was generated (in MeV/c).

muIniPolX, muIniPolY, muIniPolZ (Double_t) – initial polarisation of the muon when it was generated.

muDecayDetID (Int_t) – ID number of the detector in which the muon stopped and decayed.

muDecayTime (Double_t) – the time at which the muon decayed (in μs).

muDecayPosX, muDecayPosY, muDecayPosZ (Double_t) – the position where the muon stopped and decayed (in mm).

muDecayPolX, muDecayPolY, muDecayPolZ (Double_t) – polarisation of the muon when it stopped and decayed.

muTargetTime (Double_t) – time at which the muon entered the volume named exactly “Target” or “target” – usually the sample (in μs).

muTargetPolX, muTargetPolY, muTargetPolZ (Double_t) – polarisation of the muon when it entered the volume named exactly “Target” or “target” – usually the sample.

muTargetMomX, muTargetMomY, muTargetMomZ (Double_t) – momentum of the muon when it entered the volume named exactly “Target” or “target” – usually the sample.

muM0Time (Double_t) – time at which the muon entered the detector called “M0” or “m0” (in μs).

muM0PolX, muM0PolY, muM0PolZ (Double_t) – polarisation of the muon when it entered the detector called “M0” or “m0”.

muM1Time (Double_t) – time at which the muon entered the detector called “M1” or “m1” (in μs).

muM1PolX, muM1PolY, muM1PolZ (Double_t) – polarisation of the muon when it entered the detector called “M1” or “m1”.

muM2Time (Double_t) – time at which the muon entered the detector called “M2” or “m2” (in μs).

muM2PolX, muM2PolY, muM2PolZ (Double_t) – polarisation of the muon when it entered the detector called “M2” or “m2”.

posIniMomX, posIniMomY, posIniMomZ (Double_t) – Initial momentum of the decay positron (in MeV/c).

nFieldNomVal (Int_t) – number of the elementary fields that make together the global field.

fieldNomVal[nFieldNomVal] (array of Double_t) – nominal values of all elementary fields. (They are usually constant, but sometimes they may vary from event to event).

BxIntegral, ByIntegral, BzIntegral, BzIntegral1, BzIntegral2, BzIntegral3 (Double_t) – calculates the field integrals along the muon path and path lengths defined as

$$\text{BxIntegral} = \int_{\mu \text{ path}} B_x(s) ds \quad (1)$$

$$\text{ByIntegral} = \int_{\mu \text{ path}} B_y(s) ds \quad (2)$$

$$\text{BzIntegral} = \int_{\mu \text{ path}} B_z(s) ds \quad (3)$$

$$\text{BzIntegral1} = \int_{Z_0}^{Z_{decay}} B_z(z) dz \quad (4)$$

$$\text{BzIntegral2} = \int_{\mu \text{ path}} ds \quad (5)$$

$$\text{BzIntegral3} = \int_{Z_0}^{Z_{decay}} dz \quad (6)$$

The units are tesla·m (for the first four variables) and mm (for the last two variables). To calculate the integrals properly, the user must force Geant to use very small step size (e.g. by using something like “/musr/command globalfield setparameter SetLargestAcceptableStep 2”), and probably also to generate the muons well outside the magnetic field and put target such that muons stop at $z = 0$.

Note that these variables are by default not calculated (and not stored) and therefore the user has to switch the calculation on by “/musr/command rootOutput fieldIntegralBx on” in the macro file.

nOptPhot (Int_t) – total number of optical photons generated in the current event.

nOptPhotDet (Int_t) – number of detected optical photons for which per-photon timing can be stored.

phot_time[nOptPhotDet] (array of Double_t) – optional per-detected-photon times. This branch is created when “/musr/command rootOutput phot_time on” is used and optical-photon output is active.

det_n (Int_t) – number of “detector hits” in this event. Note that more than 1 detector might be hit, and even the same detector might be hit more than once. The hit might be induced by just one particle, by more than one particle originating from the same particle initially hitting the detector, or from more “independent” particles. For example, the decay positron can emit an Bremsstrahlung photon in the sample and then both the Bremsstrahlung photon and positron hit the same positron counter at approximately the same time.

det_ID[det_n] (array of Int_t) – ID number of the detector where the given hit occurred.

det_edep[det_n] (array of Double_t) – energy deposited in the given hit (in MeV).

det_edep_el[det_n] (array of Double_t) – energy deposited in the given hit due to electron-based interactions (in MeV).

det_edep_pos[det_n] (array of Double_t) – energy deposited in the given hit due to positron-based interactions (in MeV).

det_edep_gam[det_n] (array of Double_t) – energy deposited in the given hit due to photon-based interactions (in MeV).

det_edep_mup[det_n] (array of Double_t) – energy deposited in the given hit due to muon-based interactions (in MeV).

det_nsteps[det_n] (array of Int_t) – number of “steps” (in GEANT4 terminology) that were integrated together in the given hit. (The **det_edep[]** energy is the sum of the energy deposits during all these steps).

det_length[det_n] (array of Double_t) – the length of the trajectory of the particle (particles) that contributed to the given hit (in mm).

det_time_start[det_n], det_time_end[det_n] (array of Double_t) – the initial and final time belonging of the hit. It should be the “global time” of the track when the first and last hit occurred (in μs).

det_x[det_n], det_y[det_n], det_z[det_n] (array of Double_t) – the coordinates of the first step of the given hit.

det_kine[det_n] (array of Double_t) – should be kinetic energy of the first particle contributing to the hit, but it is not clear how to interpret this variable, so check the code for the exact meaning (in MeV).

det_Vrtx**[det_n]** – All the variables starting with “det_Vrtx” refer to the particle with the first (in time) energy deposit belonging to the given hit. (Note that the hit might be induced by more than one particle.) The vertex, at which the particle was created, may or may not be positioned within the sensitive volume, in which the hit is observed.

det_VrtxKine[det_n] (array of Double_t) – the kinetic energy of the first (in time) particle belonging to the hit.

det_VrtxX[det_n], det_VrtxY[det_n], det_VrtxZ[det_n] (array of Double_t) – the position of the vertex of the first particle that belongs to the given hit (in mm).

det_VrtxVolID[det_n] (array of Int_t) – ID of the detector in which the vertex (see above) was created.

det_VrtxProcID[det_n] (array of Int_t) – ID of the physics process in which the vertex (see above) was created.

det_VrtxTrackID[det_n] (array of Int_t) – track ID of the first particle that belongs to the given hit. If the track ID is negative, there were more than just one track contributing to this hit. The absolute value of **det_VrtxTrackID[det_n]** corresponds to the first (in time) track.

det_VrtxParticleID[det_n] (array of Int_t) – particle ID of the first particle that belongs to the given hit. (Some relevant particle IDs: Muon+=-13, Muon-=+13, Electron=11, Positron=-11, Gamma=22, Proton=2212, Neutron=2112, Pion-=-211, Pion+=211.)

det_Vvv**[det_n]** – similar to the variables **det_Vrtx****[det_n]** above, but if the first particle belonging to the hit was created inside of the logical volume where the hit occurs, then it’s track is followed to its mother track (even several times) until the track (particle) is found that has been created outside the given volume. This way one can better investigate which (hopefully) single particle caused the hit. Even though even in this case it is not guaranteed that only a single particle gave origin to the hit, it is quite likely, though, that it was in fact just a single particle. The available **det_Vvv** branches mirror the **det_Vrtx** set: kinetic energy, vertex position, volume ID, process ID, track ID and particle ID.

odet_n (Int_t) – number of “optical photon signals” in this event. Note that there can be several optical photon signals per detector. In principle, the optical photons contributing to the same signal may originate from more than one charged particle. Ideally, there should be the same number of optical photon signals as there are “detector hits”, i.e. **odet_n** = **det_n**. However, detector hits are treated independently of the optical photon signals, and they do not have to match perfectly.

odet_ID[odet_n] (array of Int_t) – ID number of the detector where the given optical photon signal occurred. The detection of optical photons happens at the boundary of surfaces, and it is assigned to the volume ID *to* which the photon enters (and not *from* which it comes). This e.g. allows one to attach more APDs to one scintillator, in which case **odet_ID[]** will correspond to the volume IDs of individual APDs.

odet_nPhot[odet_n] (array of Int_t) – number of photons detected in the given optical photon signal.

odet_nPhotPrim[odet_n] (array of Int_t) – number of primary photons associated with the optical signal, when stored.

odet_amplCFD[odet_n] (array of Double_t) – maximum amplitude of the CFD waveform for the optical signal.

odet_timeCFD100–112, odet_timeCFD200–212, odet_timeCFD300–312, odet_timeCFD400–412, odet_timeCFD500–512 (arrays of Double_t) – optional families of CFD times calculated for the hard-coded CFD scale/delay combinations in **musrScintSD**. These branches are created when “/musr/command rootOutput odet_timeCFDarray on” is used.

odet_timeC1–odet_timeC40[odet_n] (arrays of Double_t) – optional signal-threshold crossing times for the hard-coded C1–C40 thresholds. These branches are created when “/musr/command rootOutput odet_timeC1 on” is used.

odet_timeFirst[odet_n],
odet_timeSecond[odet_n], **odet_timeThird[odet_n]**, **odet_timeLast[odet_n]** (array of Double_t) – times, when the the first, second, third and last photons, contributing to the given signal, were detected.

odet_timeA[odet_n], **odet_timeB[odet_n]** (array of Double_t) – time, when the n^{th} photon was detected, where n for *odet_timeA[i]* is given as *OPSA_fracA* multiplied by *odet_nPhot[i]*. Similarly for *odet_timeB[i]*. The variables *OPSA_fracA* and *OPSA_fracB* are defined by the “/musr/command OPSA photonFractions” command (see chapter 10).

odet_timeC[odet_n] (array of Double_t) – time, when the shape of the signal becomes larger than the threshold “OPSA_C_threshold” defined by the “/musr/command OPSA photonFractions” command (see chapter 10).

odet_timeD[odet_n] (array of Double_t) – time, when the shape of the **normalised** signal becomes larger than the threshold “OPSA_D_threshold” defined by the “/musr/command OPSA photonFractions” command (see chapter 10). The normalisation is done to 1.

odet_timeCFD[odet_n] (array of Double_t) – time as from the “Constant Fraction Discriminator”.

odet_timeMean[odet_n] (array of Double_t) – mean time of the arriving photons (calculated from the OPSAhist defined by the command “/musr/command OPSA OPSAhist”.

save_n (Int_t) – number of special kind of “save” volume that were hit in this event. The “save volume” is any volume whose name starts with letters “save”. Their purpose in the simulation is usually to check positions and momenta of particles at some position of the detector, even if the particle does not deposit any energy in the given “save” volume. Save volumes can therefore be made of vacuum.

save_detID[save_n] (array of Int_t) – ID number of the save volume.

save_particleID[save_n] (array of Int_t) – particle ID of the particle that entered the save volume. (Some relevant particle IDs: Muon+=-13, Muon=-+13, Electron=11, Positron=-11, Gamma=22, Proton=2212, Neutron=2112, Pion=-211, Pion+=211.)

save_time[save_n] (array of Double_t) – time when the particle entered in the volume (in μ s).

save_x[save_n], **save_y[save_n]**, **save_z[save_n]** (array of Double_t) – position of the particle where it entered the save volume (“GetPreStepPoint()”) (in mm).

save_px[save_n], **save_py[save_n]**, **save_pz[save_n]** (array of Double_t) – momentum of the particle when it entered the save volume (in MeV/c).

save_polx[save_n], **save_poly[save_n]**, **save_polz[save_n]** (array of Double_t) – polarisation of the particle when it entered the save volume.

save_ke[save_n] (array of Double_t) – kinetic energy of the particle when it entered the save volume (in MeV).

13 Other outputs of the simulation

The output of the simulation is stored in the file “data/musr_RUNNUMBER.root”. There are four kind of objects stored in this file:

Tree “t1” – tree containing simulated information for all events.

Vector “geantParametersD” – vector containing information valid for the whole run, e.g. the run number of the given run, number of generated events, ...

Histogram “hGeantParameters” – contains the same information as “geantParametersD”, but in the form of histogram. The (only) reason for storing the same information in two different ways (TVector and histogram TH1D) is the feature of the root “hadd” command, used for merging two or more different simulated results into one file. The command “hadd” will sum-up variables stored in “hGeantParameters”, while it will do nothing for variables stored in “geantParametersD”. Both ways are useful for different type of information.

Other histograms – some other histograms can be filled during the simulation for debugging purposes. These are typically not interesting for the analysis of the results of the simulation.

14 Visualisation

```
/musr/command visattributes volumeName colour
/musr/command visattributes materialName colour
```

In case of visualisation, one can set the colour of a logical volume *volumeName* or of all volumes made of the material with the name *materialName*. The distinction between the two options is by the first four letters of the *volumeName* – if it contains the string “log_”, it is considered as *volumeName*, otherwise it is considered to be a material with *materialName*.

Presently the following colours are predefined: “invisible”, “white”, “black”, “red”, “darkred”, “green”, “blue”, “lightblue”, “darkblue”, “blue_style”, “fblue_style”, “yellow”, “gray”, “cyan”, “magenta”, “oxsteel”, “MCP_style”, “MACOR_style”, “SCINT_style”, “dSCINT_style”, “VTBB_style”, “Grid_style” and “RA_style”.

New colours can be easily added, if needed, in the member function “musrDetectorConstruction::SetColourOfLogicalVolume”.

15 Upgrading Geant4 version

Geant 4.9.1 and older - copy the file “src/G4DecayWithSpin.cc_for_Geant4.9.1_and_older” to the file “src/G4DecayWithSpin.cc”. Also copy “src/G4EqEMFieldWithSpin.cc_for_Geant4.9.1_and_older” to “src/G4EqEMFieldWithSpin.cc”.

Geant 4.9.2.p02 – (only this particular Geant version!) copy the file “src/G4EqEMFieldWithSpin.cc_for_Geant4.9.2p02_only” to the file “src/G4EqEMFieldWithSpin.cc”.

Geant 4.9.2 and older - copy the file “src/musrPhysicsList.cc_Geant4.9.2p02_and_older” to the file “src/musrPhysicsList.cc”.

Geant 4.9.3 From the point of view of musrSim, the largest change in version 4.9.3 with respect to 4.9.2 is the different treatment of the physics processes, therefore the musrPhysicsList.cc had to be modified, and also the physics processes listed in the *.mac file have to be changed! Note that using Geant 4.9.3 with old *.mac files will formally run OK, but the results of the simulation (slightly) differ from the same simulation based on Geant 4.9.2. However after updating the *.mac file, the simulation done with Geant 4.9.3 more or less reproduces results obtained with Geant 4.9.2.

16 Historical Example 1 – Electrons passing through two scintillator tiles (101.mac)

Archive status: run/101.mac is referenced by this historical section and by the current CMake file, but it is not present in the supplied source snapshot. The description below is retained for historical context and cannot be reproduced from this repository without restoring the macro. One of the easiest example to illustrate the basic features of the musrSim (and/or Geant4) is to shoot electrons into a scintillator block, and to observe the energy deposited inside it. Figure 1 illustrates a simple geometry made of an

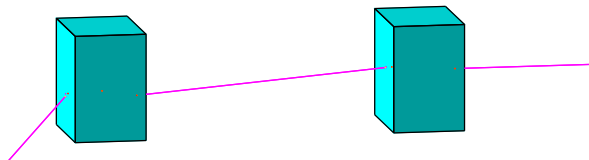


Figure 1. A simple simulation of an electron passing through two scintillator tiles.

electron source and two blocks of scintillator tiles with the dimensions of $3 \times 3 \times 2$ mm, which is defined in the macro file “101.mac”. The primary particles are electrons with the energy of 2.15 MeV shot into the first scintillator. There the electron can be scattered, and therefore it may or may not hit the second scintillator. We have used the command

```
/musr/command storeOnlyEventsWithHitInDetID 11
```

and therefore only the events, in which there was some energy deposited in the second collimator, will be saved into the output Root file.

To run this example, do the following:

1. Change to the directory `musrSim/run/`
2. If the subdirectory `data` does not exist, create it.
3. Run your Geant4 initialisation script (typically something like
`source /home/install/geant4.9.4/env.sh`
 where the path to the `env.sh` script depends on the directory where Geant4 is installed on your computer.
4. Execute the command `musrSim 101.mac`
5. The example file `101.mac` will try to visualise the events using the Dawn graphics program. To simulate some data (without the visualisation), uncomment the line `/vis/disable`, comment the line `/control/execute visDawn101.mac` and change number of generated events to e.g. 1000 (by command `/run/beamOn 1000`).

6. Look at the output using Root, e.g. by commands

```
$ root
root [0] TFile* f2=new TFile("data/musr_101.root")
root [1] .ls
root [2] t1->Print()
root [3] t1->Draw("det.edep","det_ID==10") //energy deposited in the first scintillator
root [4] t1->Draw("det.edep","det_ID==11") //energy deposited in the second scintillator
root [5] t1->Draw("det.time_start[0]-det.time_start[1]") //T.O.F. between the two scint.
root [6] .q
```

Note that the hits in one event are ordered according to the deposited energy, and therefore the first hit sometimes corresponds to the hit in scintillator counter 10, sometimes to the hit in counter 11. Therefore the histogram created by the command `t1->Draw("det.time_start[0]-det.time_start[1]")` has two peaks – at a positive and at a negative time.

17 Historical Example 2 – Sr decay electrons passing through two scintillator tiles (102.mac)

Archive status: `run/102.mac` is not present in the supplied source snapshot. The Geant4 9.4 radioactive-decay data-file editing instructions below are historical and should not be treated as installation instructions for the current Geant4 11.x-based source tree. This example is very similar to the previous one. The only difference is that initial particles are decay electrons from a ^{90}Sr source. Because ^{90}Sr decays to ^{90}Y , which in turn also decays emitting an electron, we have in fact two decay electrons per event (two emission spectra from the strontium source). The data for the strontium and yttrium decay are taken from the Geant4 data files, namely

`/home/install/data_geant4.9.4/RadioactiveDecay3.3/z38.a90` and
`/home/install/data_geant4.9.4/RadioactiveDecay3.3/z39.a90`.

There is, however, one problem in `musrSim` – it has to handle times with picosecond precision, and the *double* precision used in the `c++` program is then not enough to deal with the ^{90}Sr decay time of 29 years. For this reason, one has to modify the decay times in the two data files, i.e. in the file `z38.a90`, one should replace the line

```
P      0.0000   9.0820e+08
```

by the line

```
P      0.0000   9.0820e-08
```

and in the file `z39.a90`, one should replace the lines

```
P      0.0000   2.3080e+05
```

```
P      682.0300   1.1480e+04
```

by the lines

```
P      0.0000   2.3080e-05
```

P 682.0300 1.1480e-04

This way, the decay times are reasonably short, and musrSim can handle them.

Another complication comes from the fact, that the decay electrons are emitted isotropically from the Sr source. In principle, it is possible to restrict the emission angles in the GPS (General Particle Source), but we have not done this intentionally, because we did not want to exclude events in which the decay electron enters a counter after scattering in the air. In the end only a very small fraction of events hits the second counter, and is written out to the output file. (In any case – the events in which electron does not enter any counter are simulated in a much shorter time than the “interesting” events.)

The example 102.mac is based on the results published in [9].

18 Historical Example 3 – Simulation of the light transport (103.mac)

Archive status: run/103.mac is not present in the supplied source snapshot. This example is similar to example 1, and extended by the simulation of light (“optical photons”). The light simulation slows down the execution of musrSim dramatically.

The simulation of light is a new feature in musrSim, and it is being tested. Once this is finished, we will improve this example. However, it seems to be running fine in its current implementation, so you can start using it. A lot of useful information about the optical photons is given in chapter “Optical Photon Processes” in the Geant4 User Manual [4].

19 Historical Example 4 – GPD instrument (201.mac)

Archive status: run/201.mac is not present. Current GPD macros are supplied under run/GPD/. The General Purpose Decay-Channel Spectrometer (GPD) instrument [7] at PSI, more or less as implemented in reality in the year 2010, is exemplified in run 201.mac. GPD instrument is optimised for the measurements of pressured samples in a special pressure cells. The detector system is relatively simple – it consist of a rectangular muon counter (10x10x2 mm), two backward positron counters, three forward positron counters, cylindrical sample in a cylindrical sample holder, two lead collimators, one copper collimator, GPD magnet, and some additional “dead” material. The GPD geometry is illustrated in Fig. 2-5, where some of the elements present in the simulation (beampipe, magnet, aluminium profiles) are not displayed for simplicity. The most important parameters of the simulation are summarised in table 2.

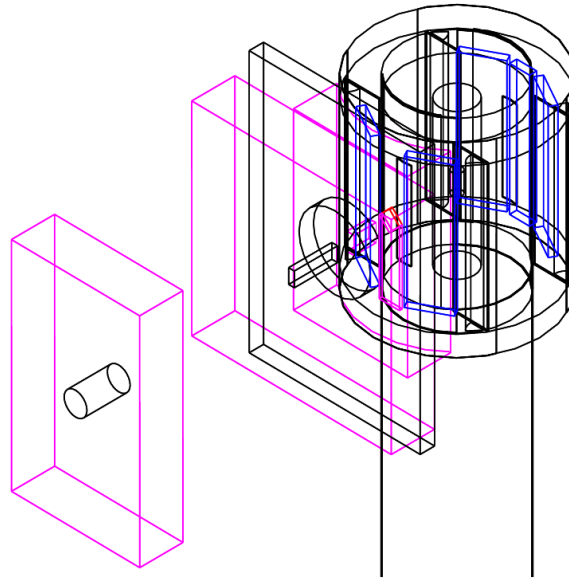


Figure 2. 3D view at the GPD detector system (run 201). Blue colour indicates the positron counters, magenta stands for collimators, red is the muon counter. GPD magnet, some Aluminium U-profiles and beampipe are not shown in the plot, however they are included in the simulation.

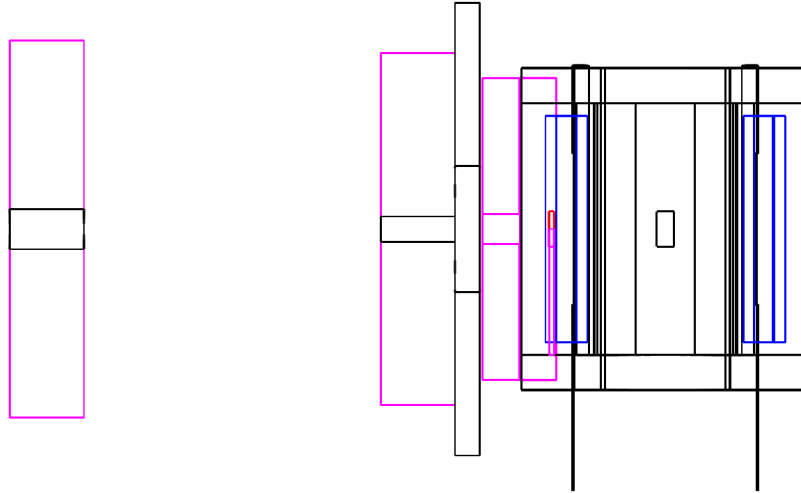


Figure 3. Side view of the GPD detector.

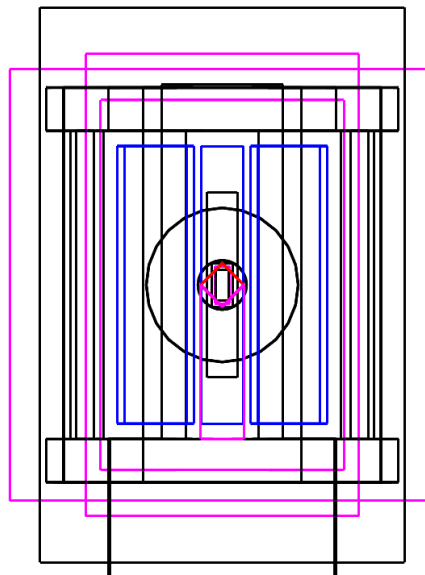


Figure 4. Front view of the GPD detector.

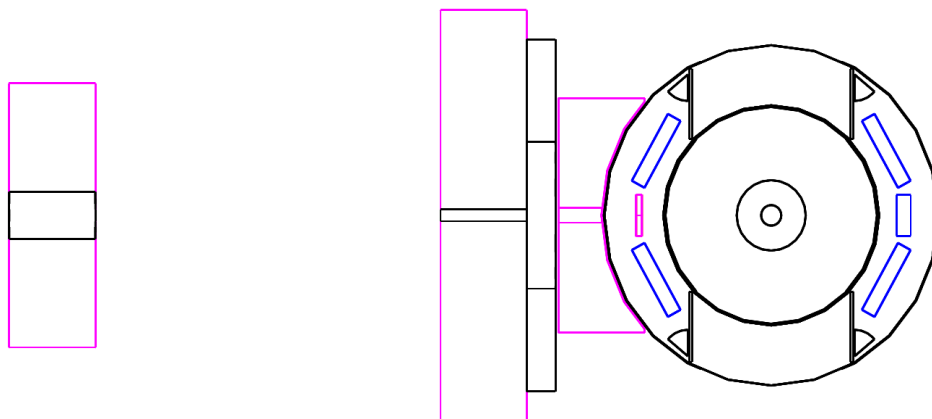


Figure 5. Top view of the GPD detector.

Component	Dimension	Material
positron counter scintillator	$26 \times 90 \times 5$ mm	plastic vinyltoluene
middle forw. positron counter scint.	$14 \times 90 \times 5$ mm	plastic vinyltoluene
muon counter	$10 \times 10 \times 2$ mm	plastic vinyltoluene
sample	R=3.5 mm, L=14 mm	Cu
sample cell	R=12 mm, L=100 mm	Cu
Cu collimator	$80 \times 120 \times (\sim 20 - 30)$ mm	Cu
Cu collimator opening	5×12 mm	
Pb collimator	$140 \times 140 \times 30$	Pb
Pb collimator opening	4×10 mm	
Collimator 1	R=100 mm, L=30 mm	Pb
Collimator 1 opening	$R_{opening}=8$ mm	
distance sample – Pb collimator	90 mm (centre – centre)	
distance sample – collimator1	250 mm (centre – centre)	
distance sample – beampipe window	600 mm	
muon initial momentum	100 ± 3 MeV/c	
muon initial z -coordinate	-1.0 m with respect to sample	
muon initial x and y coordinate	Gaussian smearing, $\sigma_x = \sigma_y = 25$ mm	
magnetic field	300 gauss	

Table 2. Main parameters of the simulation.

A non-standard feature of this simulation is the muon momentum, which is ~ 100 MeV/c. The copper collimator used in GPD has a somewhat complicated shape, which required the use of subtraction of logical volumes in Geant4. This operation can not be specified through the macro file, and therefore a special kind of volume called `GPDcollimator` has been hard-coded into the source code (namely in the routine `musrDetectorConstruction.cc`), and it is then activated in the macro file using the command

```
/musr/command construct GPDcollimator ...
```

The results of this GPD simulation are described in the *musrSimAna* manual [8].

20 Examples included in the current source tree

The source snapshot reviewed for this revision contains example and production-style macros in instrument-specific subdirectories rather than the old `101.mac/201.mac` layout. In particular:

- **run/GPD/:** bundled GPD macros including `40111.mac`, `40505.mac`, `40506.mac`, `40507.mac` and `40601.mac`–`40605.mac`, together with several matching `.v1190` analysis files and a field table.
- **run/GPS/:** GPS instrument macros `50131.mac`, `50132.mac`, `50133.mac`, `50134.mac` and `template_Mark-II.mac`, together with field-map/data files.
- **run/LEM/:** LEM examples and templates, including recent 2024-named macro files and the field maps they reference.

These files are the best starting point for syntax examples because they are actually distributed with this source snapshot. Some are instrument-specific and may require the associated map/data files in the same directory. The older numbered examples described above are retained only as historical documentation until their macro files are restored or those sections are rewritten around current examples.

21 Conclusions

Please let us know your comments and suggestions for further improvement/development of the *musrSim* program.

References

1. S.J. Blundel, *Contemp. Phys.* 40 (1999) 175.

2. S. Agostinelli *et al.*, Nucl. Instr. and Meth. A 506 (2003) 250.
J. Allison, *et al.*, IEEE Trans. Nucl. Sci. 53 (2006) 270.
3. R. Brun, F. Rademakers “ROOT - An Object Oriented Data Analysis Framework”, Nucl. Inst. and Meth. in Phys. Res. A 389 (1997) 81. See also <http://root.cern.ch/>.
4. Geant4 User Manual
5. K.L. Brown, Ch. Iselin, D.C. Carey, “*Decay Turtle*”, CERN 74-2 (1974).
U. Rohrer, “*Compendium of Decay Turtle Enhancements*”, <http://pc532.psi.ch/turtcomp.htm>
6. T. Shiroka *et al.* “GEANT4 as a simulation framework in muSR”, Physica **B 404**, (2009) 966-969
7. <http://lmu.web.psi.ch/facilities/gpd/gpd.html>
8. K. Sedlak, “Manual of musrSimAna”.
9. A. Stoykov *et al.* “First experience with G-APD in μ SR instrumentation”, Nucl. Inst. and Meth. in Phys. Res. A **610** (2009), 374-377.